

1 LAN Setup

2 Download IpResolver

<http://www.solar-inverter.com/en-GB/259.htm>

3 Start IpResolver

4 Login

Default Login: Delta
Default Password: 000000

5 Connection Settings

Upgrade Firmware

6 Upgrade Firmware

New firmware detected.
Download and update in progress ...

Reload after 5 min

The new firmware you recently requested was successfully installed.